

## Trains and Cityscapes

- MS01** Busy Railway Station – Duration 6'36"
- MS02** US Railroad sounds – Duration 4'53"
- MS03** Machine Shop – Duration 5'35"
- MS04** Traffic on a busy street – Duration 5'44"
- MS07** Cityscape – Duration 5'58"
- MS10** Farmyard – Duration 5'52"
- MS17** Big Static Engine - Duration 6'50"
- MS18** Small Static Engine - Duration 5'36"
- MS20** Small Steam Loco - Duration 5'26"
- MS21** Diesel Loco - Duration 5'15"
- MS26** Welding and Panel Beating – Duration 5'20"
- MS27** Church Bells – Duration 5'42"
- MS28** Vintage Petrol Loco with Horn – Duration 5'41"
- MS36** Hunslet Cab Ride with Whistle – Duration 8'04"
- MS37** Carriage Clickety-Clacks – Duration 6'40"
- MS38** Cattle truck with Sheep – Duration 6'40"
- MS39** Cattle truck with Cows – Duration 6'40"
- MS49** GE CF44-9W US Diesel Loco– Duration 20'46"
- MS51** Ruston Loco Slow – Duration 12'50"
- MS52** Ruston Loco Fast – Duration 8'40"
- MS53** Ruston Cab Ride – Duration 11'50"
- MS54** Tram Cab Ride – Duration 9'50"
- MS56** Fairground atmosphere – Duration 8'25"
- MS57** Mainline 4-6-2 steam loco – Duration 10'17"
- MS58** Santa's Christmas Special – Duration 8'24"
- MS59** Dawn Chorus/ Birdsong – Duration 10'25"

## Ambient and Atmospheric

- MS05** Seaside – Duration 5'11"
- MS06** Beach – Duration 7'02"
- MS08** Country Park – Duration 5'53"
- MS09** Country Meadow – Duration 6'00"
- MS19** Water Mill - Duration 5'45"
- MS23** Fountain with Birdsong – Duration 14'56"
- MS24** Rain and Thunder - Duration 7'15"
- MS45** Quacking duck – Duration 6'10"

## CHANGING THE SOUND CARD IN YOUR SPEAKER

### UNIT

To change the card over, firstly locate the sound card that is in the unit.

Make sure the unit is TURNED OFF.

Gently PUSH the installed card further into the unit until you hear a click and the card will pop out so you may remove it. Avoid touching the gold contacts on the card as they need to remain clean.

Take your other card and push it onto the slot until it clicks into place. Make sure you insert the new card straight and level.

Avoid touching the gold contacts on the new card you are inserting.

**REMEMBER - It is illegal to make copies of**

**Model Sounds™ sound files**

## Dolls House Effects

- MS11** - Dolls House Spot Effects – Duration 30'00"

## Battle Sounds/ Militaria

- MS25** WWII Piston Aircraft Scramble – eight layers of sound! – Duration 6'30"

## Model Boat & Aeroplane Sound Effects

- MS12** Diesel Boat – Duration 10'50"
- MS12A** Diesel Boat with horn – Duration 10'50"
- MS13** Steam Boat – Duration 10'28"
- MS13A** Steam Boat with horn – Duration 10'28"
- MS13B** Steam Boat with horn & telegraph – 10'28"
- MS13C** Steam Boat with whistle – 10'28"
- MS14** Old Boat, Lister – Duration 10'58"
- MS14A** Old Boat, Lister, no squeaks! – 5'09"
- MS15** Fishing Boat – Duration 9'30"
- MS16** Boat Exterior – Duration 12'02"
- MS22** Single Screw Large Boat with Foghorn – 6'50"
- MS29** Petrol Boat Engine – Duration 5'40"
- MS30** Gas Turbine A – Duration 20'00"
- MS31** Twin Gas Turbines with Start Up – 15'40"
- MS32** Gas Turbine B with Start Up – 16'10"
- MS33** Petrol Boat 2 – Duration 15'30"
- MS34** Twin Cats C with Shut Down – Duration 10'20"
- MS35** Turbine C Trent Lifeboat Start and Shut Down – Duration 12'20"
- MS40** Battleship – Duration 11'00"
- MS41** Aircraft carrier with fighter jets – Duration 11'00"
- MS42** Aircraft carrier with piston aircraft – Duration 11'00"
- MS43** Gun boat and MTB sounds – Duration 11'00"
- MS44** Police launch – Duration 6'00"
- MS46** Galleon with cannons – Duration 10'02"
- MS47** Passenger ferry – Duration 19'27"
- MS48** Car ferry – Duration 21'31"
- MS50** Submarine – Duration 17'57"
- MS55** Big guns – Duration 2'39"

## Trucks

- KN01** – Volvo VH13 interior cab ride - Duration 20'00"
- KN02** – Tractor unit tickover & horn - Duration 11'18"
- KN02A** – Tractor unit without horn - Duration 10'58"
- KN03** – Forward motion, start & horn - Duration 8'40"
- KN03A\*** – Forward motion & horn - Duration 8'30"
- KN04\*** – Reversing with beeper - Duration 17'10"
- KN05** – Double horn repeated - Duration 8'22"
- KN05A** – Double horn every minute - Duration 8'22"
- KN06** – Single horn repeated - Duration 8'22"
- KN06A** – Single horn every minute - Duration 8'22"
- KN07** – Coupling & uncoupling trailer - Duration 2'15"

\* – available together on one sound card – please enquire

**Model Sounds™**

Tel; 07970 883663 Email; gavin@stoneybridge.co.uk Website; www.stoneybridge.co.uk  
UK VAT Registered - 200 9186 38